

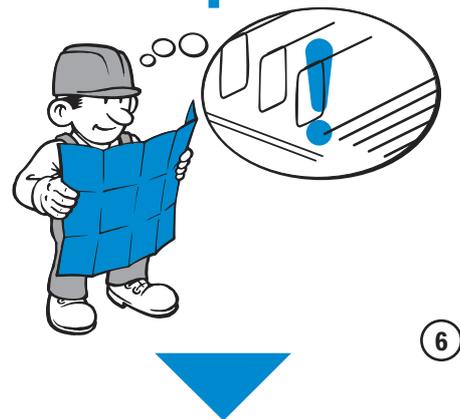


# SCHÖCK ISOKORB® TYPE K-HV, K-BH, K-WO, K-WU

Installation instructions

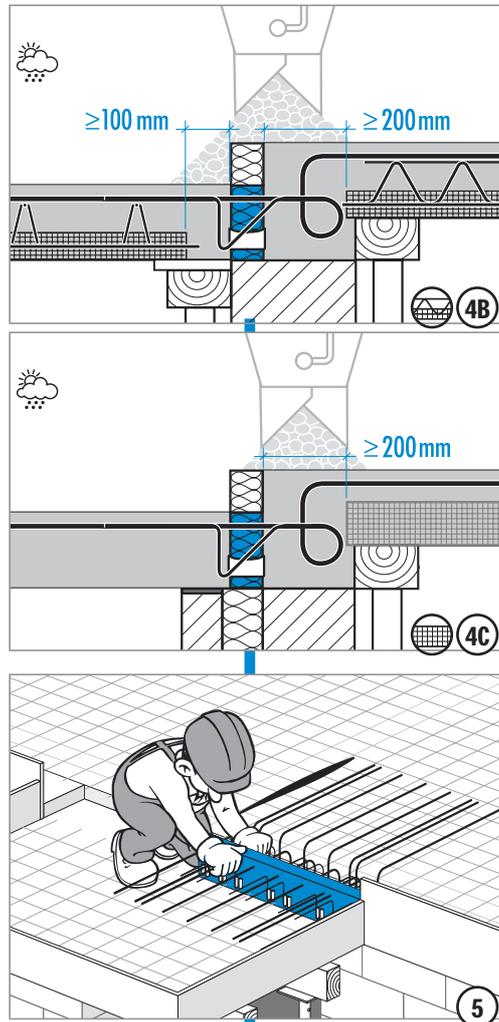

SCHÖCK ISOKORB®

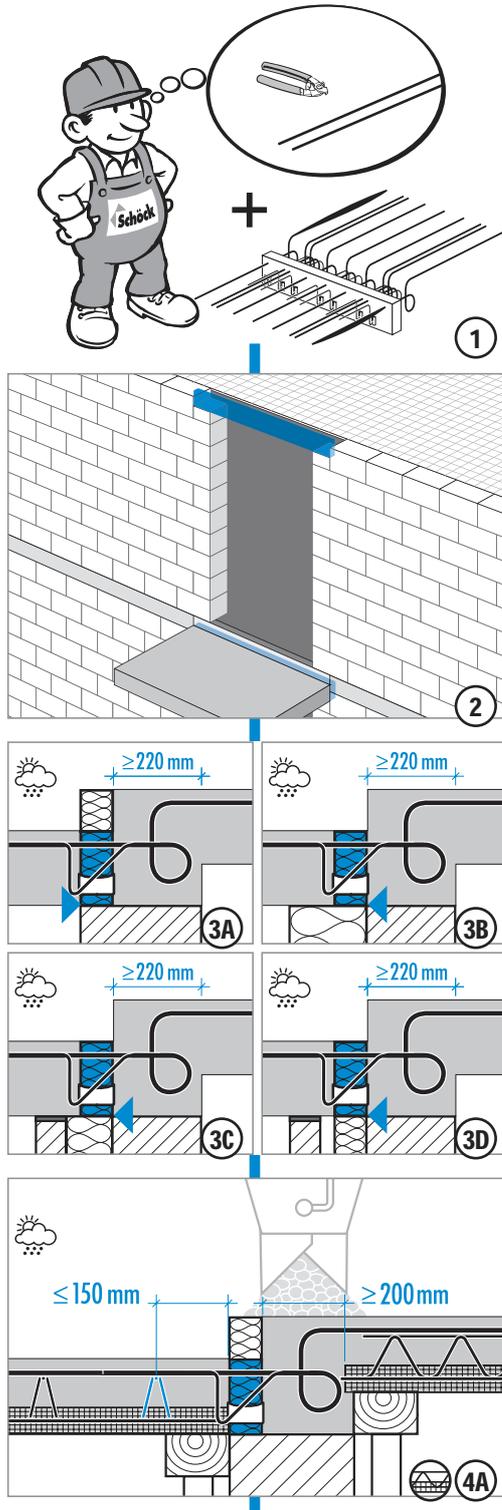

# SCHÖCK ISOKORB® TYPE K-HV, K-BH, K-WO, K-WU

Installation instructions



SCHÖCK ISOKORB®

