


Installation instructions for concrete frame constructor

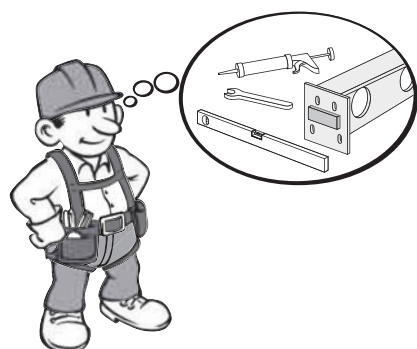

SCHÖCK ISOKORB® TYPE KS 14


Installation instructions for steel fabricators




11




12

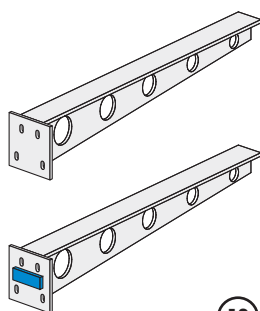


13

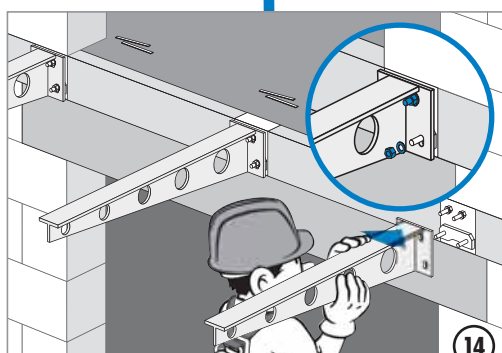


14

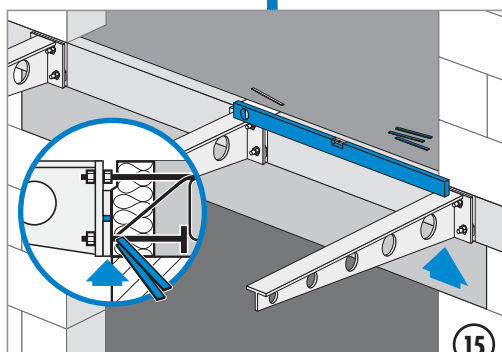


15

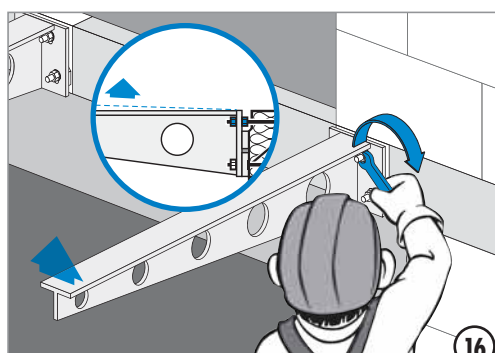

16

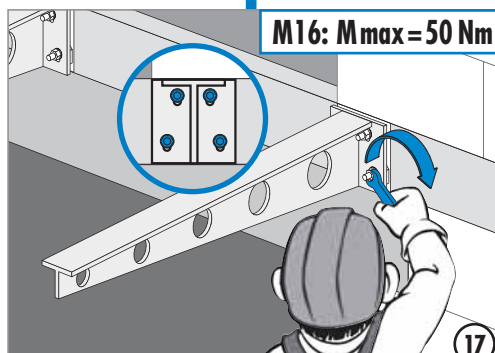

17

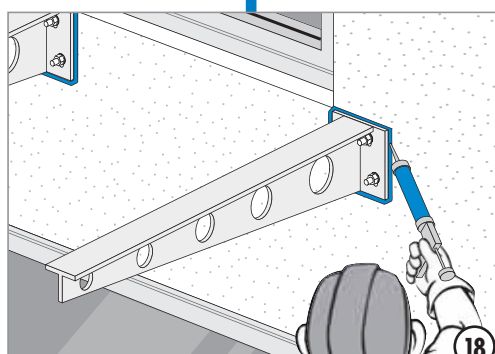

18




KS

Reinforced concrete-to-steel

SCHÖCK ISOKORB® TYPE KS 20

Installation instructions for concrete frame constructor

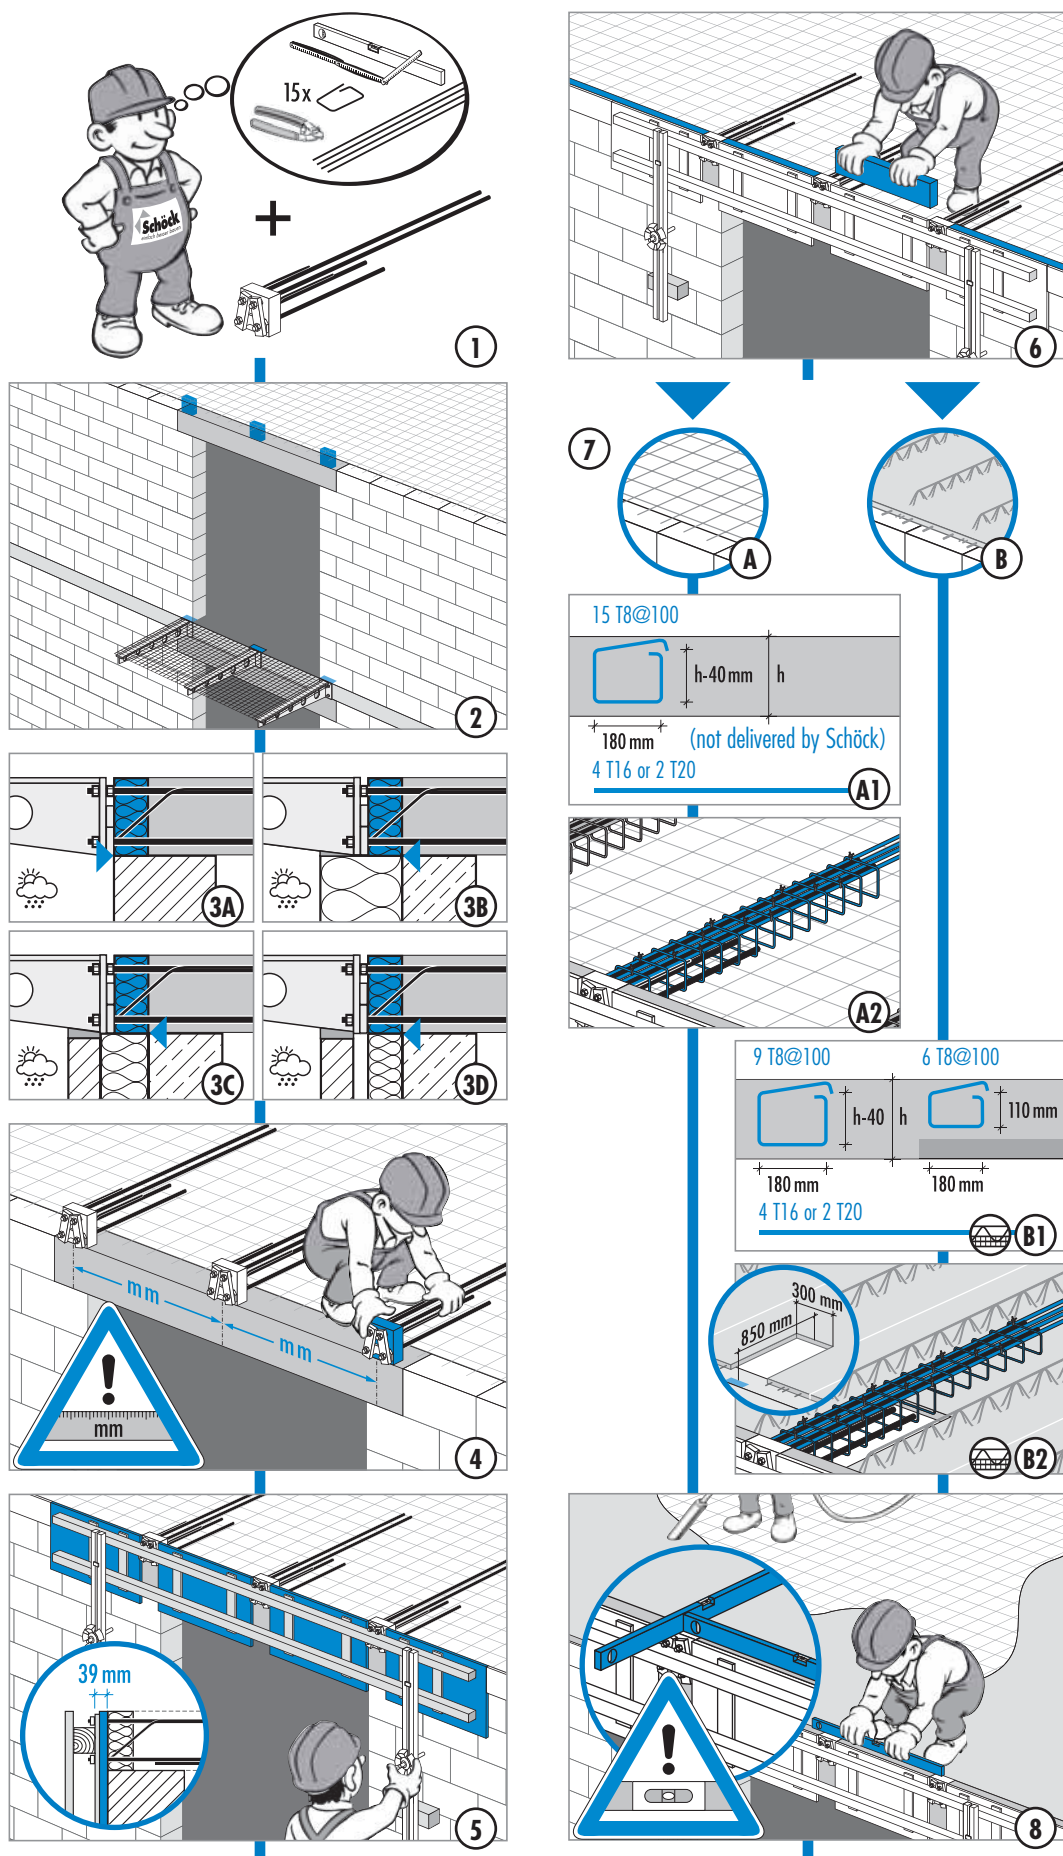


KS


Reinforced concrete-to-steel

SCHÖCK ISOKORB® TYPE KS 20

Installation instructions for steel fabricators

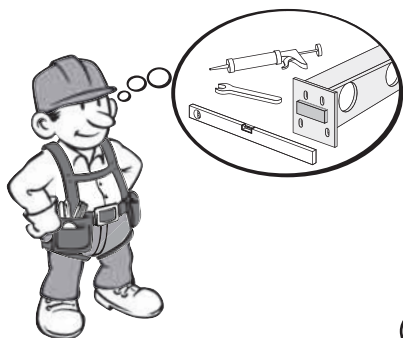


9

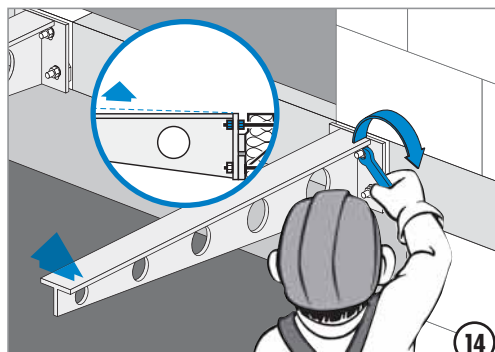


14




10

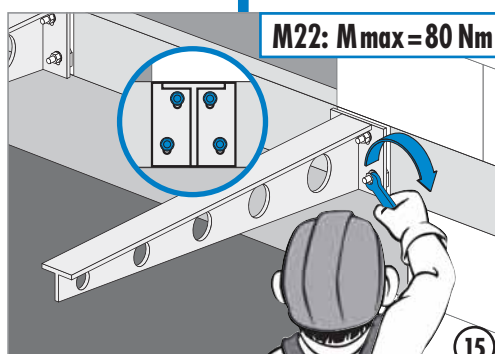


15

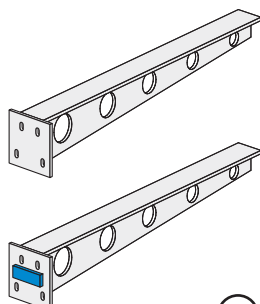


11

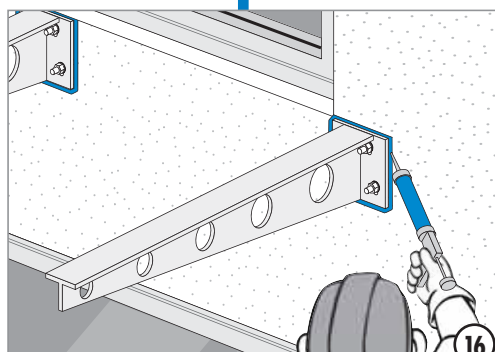

16

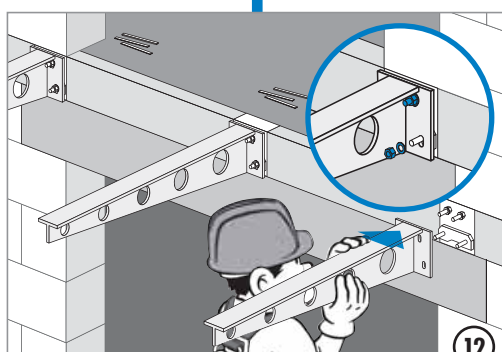

12

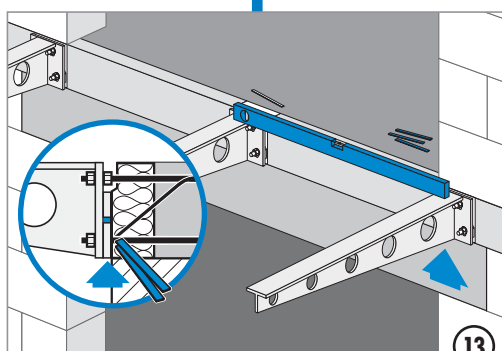

13



KS

Reinforced concrete-to-steel